





# 

# **SUMMARY**


Activation settings of motion sensors	page 2
Manual Activation after photo verification	_ page 13
Antipanic / Anti-robbery function	_ page 15
Multi confirmation shoot settings	page 18
Notes	page 22

### **ATTENTION:**

before proceeding with the configuration of the fogging system it is necessary to set the **AJAX** alarm control panel and the related sensors / accessories.

It is also advisable to verify that the desired position for the fogging generator falls within the radio coverage range of the Jeweller **AJAX** hub.



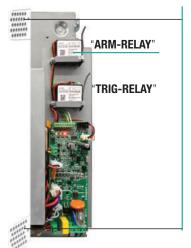


1

Unscrew the four side screws of the plastic front panel and remove it to access to the electronic board



2 Open the application and select the installed hub




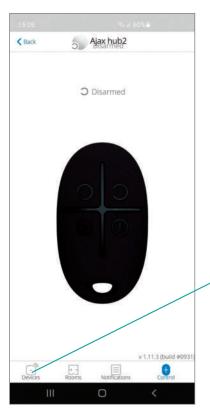


Select the icon at the bottom left "**DEVICES**"



Click

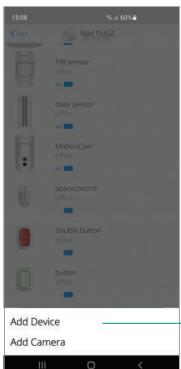

Select the item "ADD DEVICE"

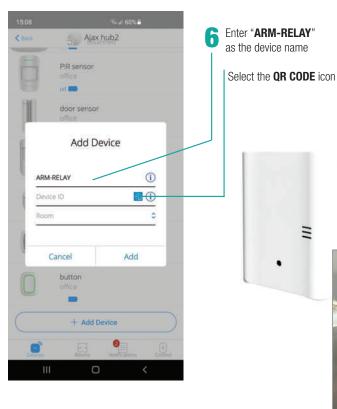

5 Ajax hub2

Add Device

+ Add Device

PIR sensor office

door sensor


ARM-RELAY 663547122

Cancel

Room

**C**Black






1


Add


Select the "**ROOM**" previously configured on the hub

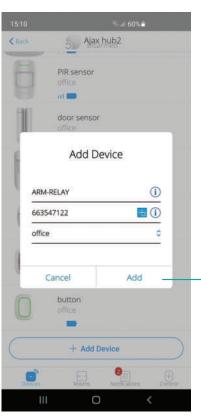

Click "ADD" to continue the installation process

At this point a countdown of 30 seconds will be activated within which you will have to press the function button of the device located on the lower right part of the relay

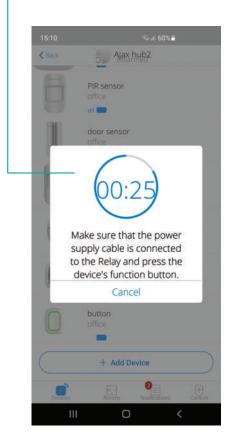

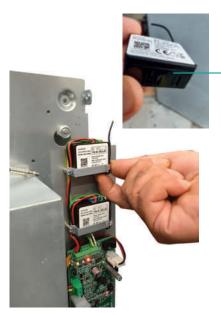

11

### ATTENTION:

the button is covered with a plastic protection



A summary screen will confirm that the relay has been installed



Once the device "ARM-RELAY" has been selected. the configuration screen will appear. Click on the wheel at the top right



Make sure that you have selected the following parameters:


- relay mode: BISTABLE


contact status **NORMALLY OPEN** 

Select the item


"SCENARIOS"



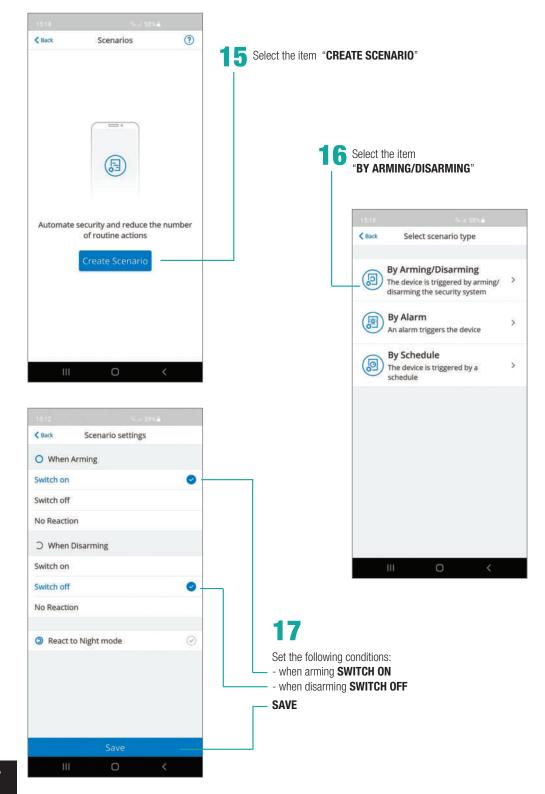


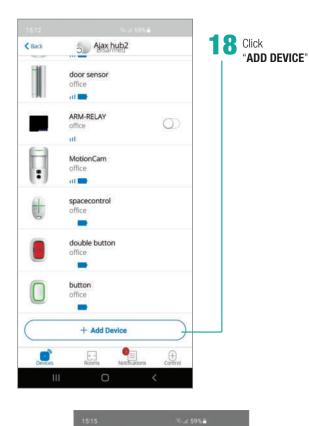

Room

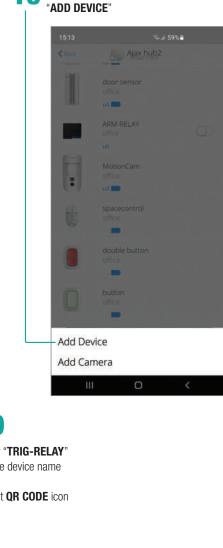

Select the item

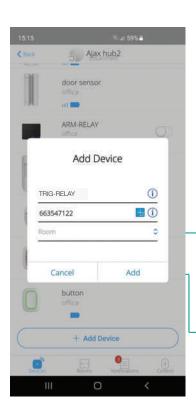

Place the camera of your Smartphone in front of the QR CODE to acquire, automatically, the ID of the relay device



**22** Select the same "ROOM" previously configured on the hub

Click "ADD" to continue the installation process

At this point a countdown of 30 seconds will be activated within which you will have to press the function button of the device located on the lower right part of the relay








A summary screen will confirm that the relay device has been installed



Once the device "TRIG-RELAY" has been selected, the configuration screen will appear. Click on the wheel at the top right

24

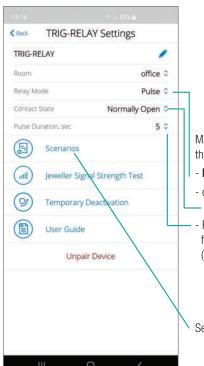

**25** 

Make sure that you have selected the following parameters:


- PULSE mode
- contact status


### - NORMALLY OPEN

 Pulse Duration, sec: from 0 to 255 (set the maximum value of 255 seconds if you do not want repeated shots)

Select the item "SCENARIOS"



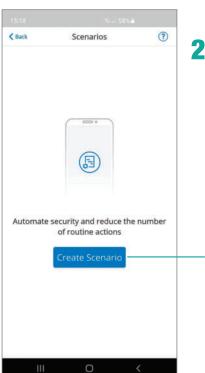

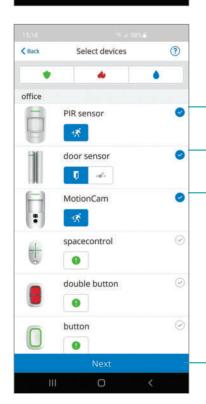

26 Select the item "CREATE SCENARIO"




28
Select the sensors/devices that send "SHOOTING SIGNAL" in the event of an alarm and click on "NEXT"




Click on "SAVE"


**TYPE THE NAME OF THE SCENARIO** (e.g. Alarm) and select ''**ONE**'' as device number to activate that scenario

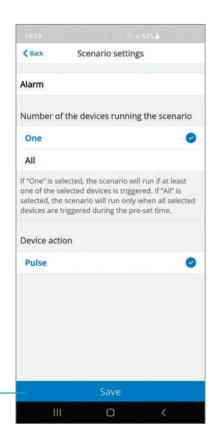

# MANUAL ACTIVATION OF THE FOGGING SYSTEM AFTER PHOTO VERIFICATION

# Configuration:

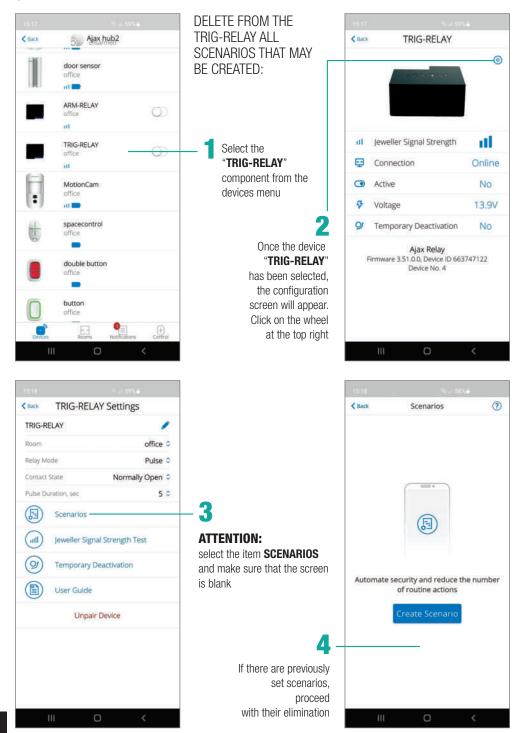

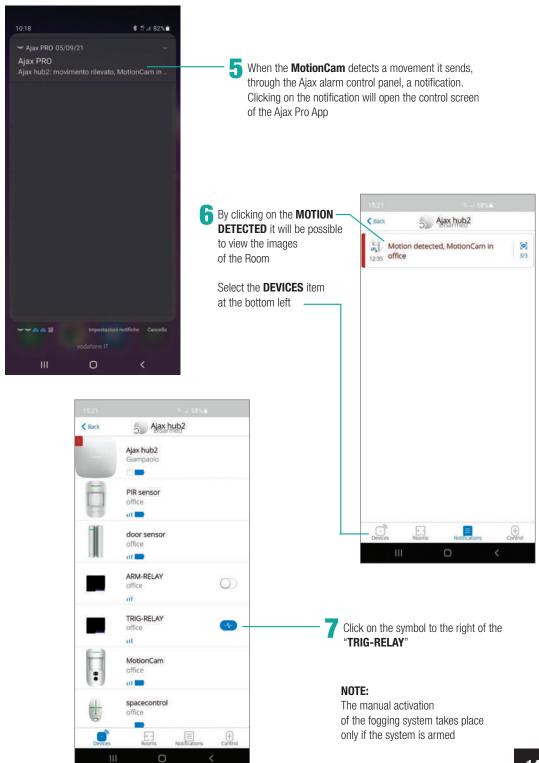

### **ANTI-PANIC FUNCTION**

Through the components AJAX **SpaceControl**, **Button** and **DoubleButton** it is possible to operate the "**Anti-panic**" function even when the AJAX alarm control panel is disarmed.


### Procedure:



1 Configure on the component **ARM-RELAY** a new scenario "**Panic**" by setting the parameters described below





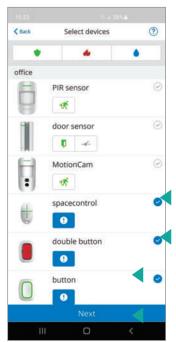







Configure a new ''Panic'' scenario on the TRYG-RELAY component by setting the parameters described below





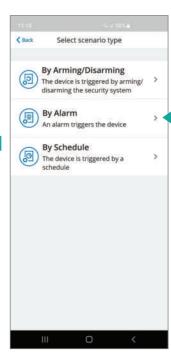

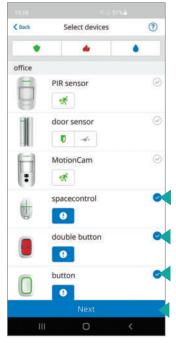





3 Depending on the operating device of the AJAX "**Anti-panic**" function installed, proceed with the relative configuration by setting the parameters following the screens below.












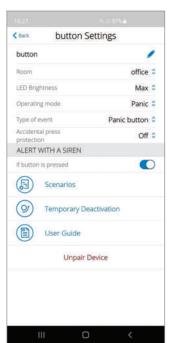



**NOTE**: by activating the PANIC function the ARM-RELAY will remain active leaving the fogging system armed. To restore it, it is needed to manually disarmed it from the App or arm and disarm the alarm system.


## **MULTI CONFIRMATION SHOOT SETTINGS**




Open the application and select the installed hub

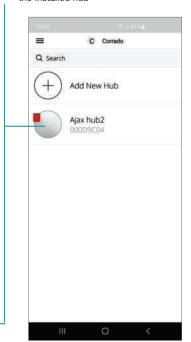


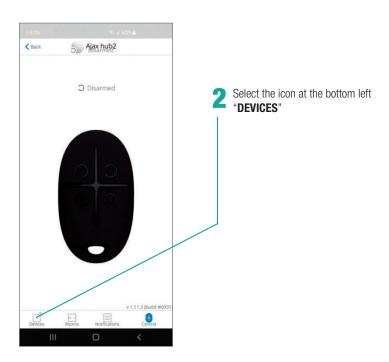

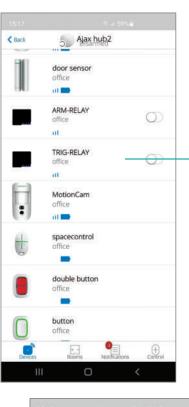

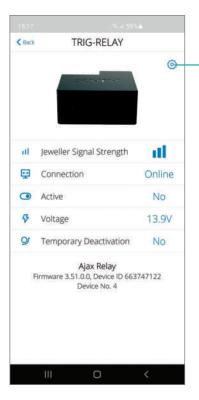

Once the device "TRIG-RELAY" has been selected, the configuration screen will appear. Click on the wheel at the top right

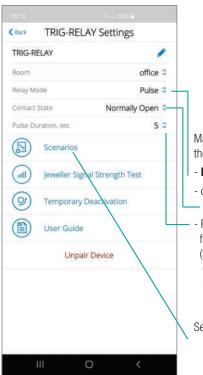

Make sure that you have selected the following parameters:

- **PULSE** mode
- contact status


### - NORMALLY OPEN

 Pulse Duration, sec: from 0 to 255 (set the maximum value of 255 seconds if you do not want repeated shots)

Select the item "SCENARIOS"




255

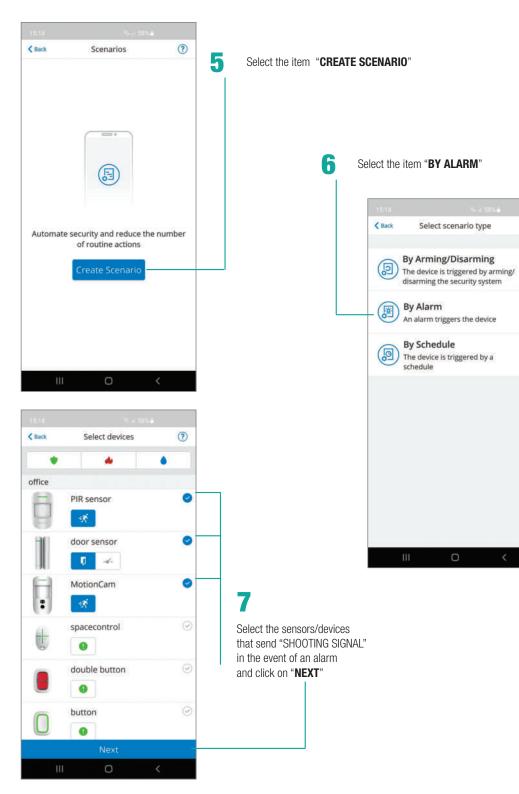

>

>

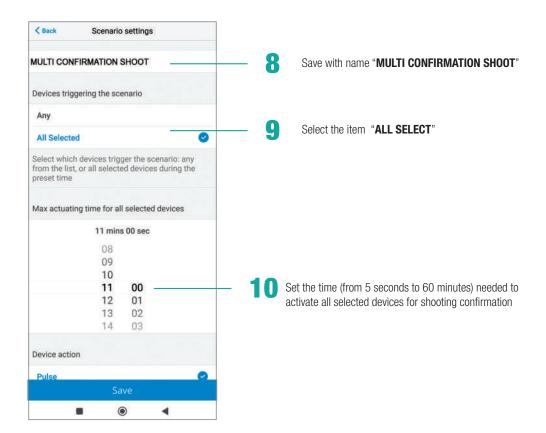

# **NOTES**







### **UR Fog S.r.l.**

Operation and delivery to: Via Toscana 38 - 10099 San Mauro T.se (Torino) - Italy Legal Office: via Giacinto Collegno 11 - 10143 Torino - Italy

Phone +39 011 0133037 - Fax +39 011 0133005 - e-mail: sales1@urfog.com

C.F. / P. Iva 10724850010 - Reg. imprese TO - 1157030 - Numero Iscrizione Reg. AEE: IT19050000011412 Numero Iscrizione Reg. Pile Accumulatori IT19100P00005758 Cap. Soc. Euro 11.000,00 int. versati